



- Parts:** Fring™ footrest
1 - 2 hole tab (A)
2 - 1 hole tabs (B)
1 - 1 hole tabs (C)
5 Screws
- Tools:** Phillips Screwdriver
- People:** 1 Person
- Time:** 8 -10 minutes

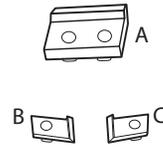


Preparation Guide

Turn chair over so the top of the back is on work surface. If arms allow, turn pads out as shown.

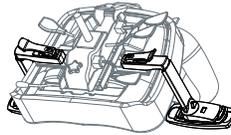

Installation Guide

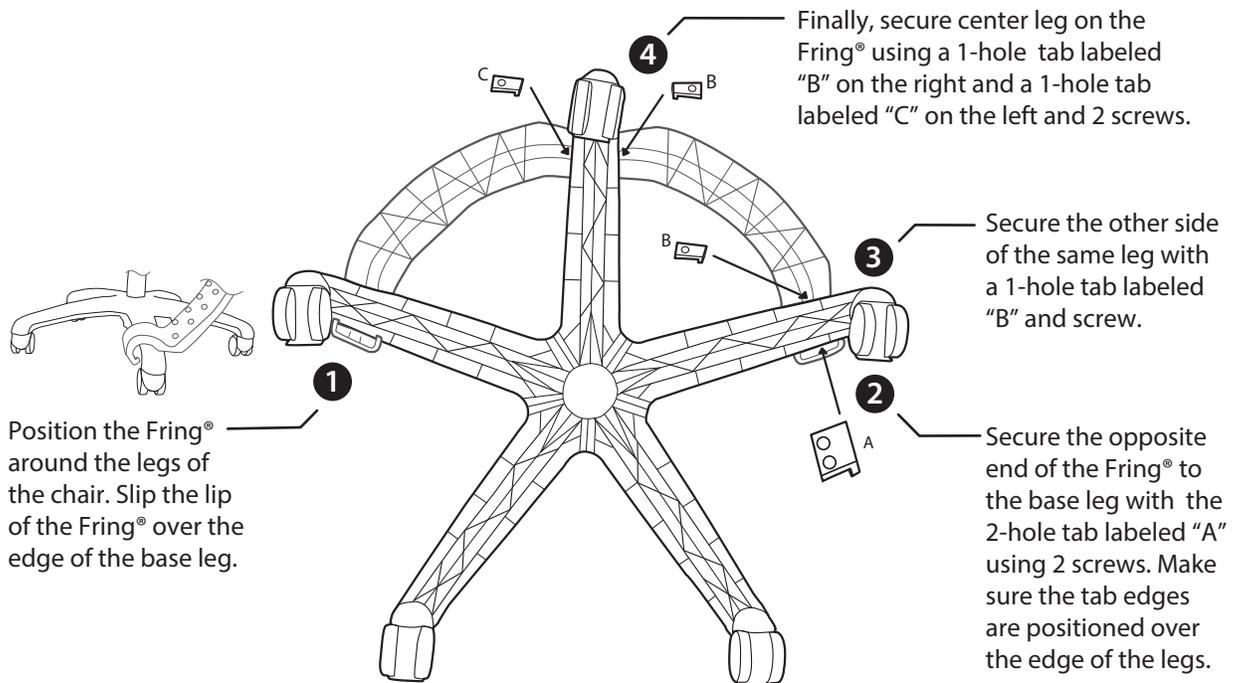

Fring® is a Neutral Posture exclusive, designed to fit our standard 26" base. It will not retrofit to all bases.