


Tools: #2 Phillips screwdriver
Scissors


People: 1 Person

Time: 20 Minutes

Caution:
Do not remove cable tie until StandUp® is completely installed.

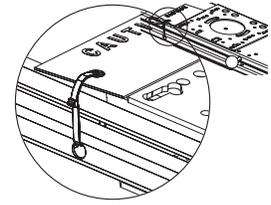


Preparation Guide

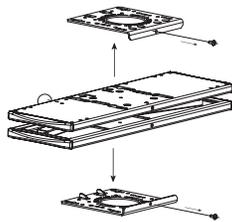



- 1** Remove attachment screws (A & B). If retrofitting, remove keyboard tray from keyboard arm.
Keep the screws to reuse in steps 3 & 4 in Installation Guide..

Installation Guide

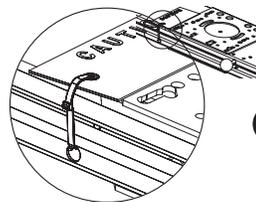

- 5** Cut and remove the cable tie and caution tag.

Attach the remaining adapter plate to the keyboard tray. Securely tighten using phillips screwdriver.

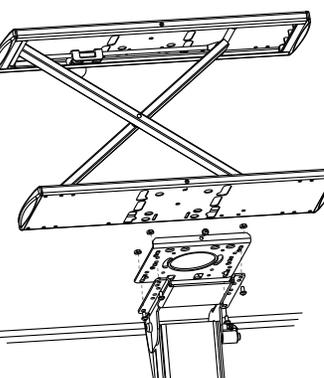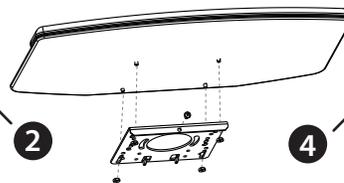

- 2** Slide the keyboard tray into place. Securely tighten using phillips screwdriver.
- 3** Slide the StandUp® into place. Securely tighten using phillips screwdriver.
- 4** Line up the 4 mounting holes of the adapter plate with the holes in the keyboard arm. Securely tighten using phillips screwdriver.